
2014-2021 Tundra Bucket Seat Installation





Step 1. Headrest/H:

All the parts of the seat covers are labeled inside the cover on the inside right front edge. Use the Seat Cover Part ID Chart to identify the parts. Slide the headrest cover on while the headrest is still on the seat with the extending hook (sticky) Velcro[™] to the front.

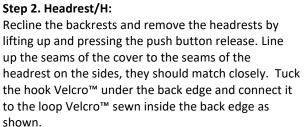



Step 3. Seat Preparation: Picture of the backside of the seat at the bottom. Feel for the elastic that's connected to the carpeted panel under the seat. Push it forward to release it from the white plastic piece. There are two per seat.



Step 4. Driver & Passenger Bottom/DB&PB: Slide the seat covers on with the long hook Velcro[™] to the front as shown.



Step 5. Driver & Passenger Bottom/DB&PB: Tuck the seat belt though the provided opening.

Step 6. Driver & Passenger Bottom/DB&PB: Tuck the seat cover behind the plastic cowling on the outside edge, but leave the Velcro[™] out.



Step 7. Driver & Passenger Bottom/DB&PB: Tuck the back edge of the seat cover into the seat. From behind the seat, pull the seat cover back to conform the front of the seat cover to the seat.



Step 8. Driver & Passenger Bottom/DB&PB: Line up the seams of the seat cover to the seams of the seat, they should match closely.



Step 9. Driver & Passenger Bottom/DB&PB: If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Fold the long front hook Velcro[™] in half lengthwise with the sticky side in



Step 10. Driver & Passenger Bottom/DB&PB: Poke the Velcro through to the backside, keeping it as close to the seat as possible. Make sure the Velcro is above any wires or bars. Connect them to the loop Velcro[™] sewn on the back edge. Connect them by using one hand in a smoothing action from front to back while pulling on the back edge of the seat cover to tighten it up, then press the Velcro[™] together.



Step 11. Driver & Passenger Bottom/DB&PB: View from the backside of the seat. Clip the plastic buckle sewn to the hook Velcro[™] under the back edge of the seat where shown, and press it onto the loop Velcro[™] sewn on the back edge. This will anchor the seat bottom in place.



Step 12. Driver & Passenger Bottom/DB&PB: As in Step 9, fold the outside edge Velcro[™] in half lengthwise and slide it behind the plastic cowling where shown.





Step 15. Driver & Passenger Bottom/DB&PB: The result is the Velcro[™] will be slightly curled. Route the Velcro[™] back up behind the cowling with the curl pointing under the seat.

Step 16. Driver & Passenger Bottom/DB&PB: Use the curled Velcro[™] to route the Velcro[™] through the gap between the seat slide and seat. Carefully feel for it in the gap while moving it with the other hand.




Step 17. Driver & Passenger Bottom/DB&PB: Route the outside edge Velcro[™] above, or to the seat side of the yellow tube, making sure to NOT pin the yellow tube to the seat.



Step 18. Driver & Passenger Bottom/DB&PB: Same as Step 12, fold the inside edge Velcro[™] in half and poke it down next to the console, poking it under the seat in the gap between the seat and seat slide.



Step 19. Driver & Passenger Bottom/DB&PB: Same as Step 16, feel for the Velcro[™] in the gap while moving it with the other hand.

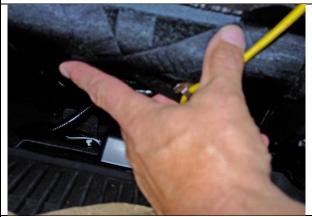

Step 20. Driver & Passenger Bottom/DB&PB: Route both side Velcro[™] to the back edge and press them to the Loop Velcro[™] sewn on the back edge in a roughly 45 degree angle forming an "X" as shown.



Step 21. Driver & Passenger Bottom/DB&PB: View from the front outside corner of the passenger seat bottom. The driver seat cover also has this buckle. Disconnect the Velcro[™] on the buckle.



Step 22. Driver & Passenger Bottom/DB&PB: View from under the front of the driver's seat showing where to hook the buckle. Open the Velcro[™] to allow slack, see Step 21. Clip the plastic buckle where shown, pull it tight, re-connect the Velcro[™].



Step 23. Driver & Passenger Top/DT&PT: Slide the seat cover on with the extending hook Velcro[™] to the front.



Step 24. Driver & Passenger Top/DT&PT: Tuck the seat cover under the plastic for the headrests, starting with the push button side.



Step 25. Driver & Passenger Top/DT&PT: Form the top corners of the seat cover to the seat by pulling down on the bottom edge of the seat cover.



Step 26. Driver & Passenger Top/DT&PT: Tuck in the front edge.



Step 27. Driver & Passenger Top/DT&PT: Make sure the both metal bars on left and right are exposed and not covered up by Velcro[™] from the seat cover bottom.



Step 28. Driver & Passenger Top/DT&PT: Fold the long front hook Velcro[™] in half lengthwise from the Driver and Passenger Top and feed it though the metal bar shown in Step 27, pull the cover down hard, then press it to the loop Velcro sewn inside. Check the front side of the seat cover for positioning and or wrinkles. Tighten the front side of the seat cover by pulling up slack in cover, then re-connect the Velcro[™].



Step 29. Driver & Passenger Top/DT&PT: Lastly, reconnect the elastic from Step 3. You may have to move some Velcro out of the way in order to expose the. Pull down on the back edge down and press the hook Velcro[™] sewn inside the seat cover to the fuzzy carpet on the backside.



Step 30. Lid/L:

Sitting in the back seat, carefully disconnect the Velcro[™] of the Lid cover and keep it spread out and set it on your lap. With the lid closed, put both hands under the cover spreading the Velcro[™] and lift the cover onto the lid. Hold the lid in place with one hand and lift it up. Connect the front to back Velcro[™] first, starting with the outside ones, then the Velcro[™] next to the latch. Temporarily connect the side to side Velcro[™] to help hold the cover in position. Next, really tighten down the front to back Velcro[™], then connect the side to side Velcro[™] to the front to back Velcro[™], basically interlocking all the Velcro together.