2015-2020 F-150 Bucket Seat Installation



Step 1. Prepare the seats for installation. Video of the install: <u>https://youtu.be/XoPkcvMxzxs</u> All the parts of your seat cover are labeled on the inside right of each part. Use the seat cover Part ID chart for identification.

Lift electric controlled seats all the way up and move both seats forward. Push the seatbelts located on the inside next to the console thru the elastic on the seat.



Step 2. Prepare the seats for installation. FOR MANUAL SEATS ONLY, disconnect the inside elastic (next to the console) holding the flap under the back edge of the seat. The other one is blocked by an electrical plug. All seats with electric controls, the elastic will not remove because of the electrical plugs.



Step 3. Headrests/H:

Slide the headrest covers on with the extending hook (sticky) Velcro[™] to the front. Recline the backrest and remove the headrest by depressing the push button release on each side until they come out.



Step 4. Headrests/H: Line up the seams of the cover to the seams of the headrest, they should closely match. Pull the Velcro[™] tight and tuck it under the back edge and press it to the loop Velcro[™] sewn inside the back edge.



Step 5. Driver & Passenger Bottom/DB&PB: Remove the plastic buckles from the back edge of the seat cover and slide the covers on with the extending hook Velcro[™] to the front.



Step 6. Driver & Passenger Bottom/DB&PB: Tuck in the back edge all the way. Line up the front seam, and left and right, then grab the material from behind the seat and pull it down. This will be a little tough on electric controlled seats because the elastic for the panel won't remove.






Step 7. Driver & Passenger Bottom/DB&PB: If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Fold the long front hook Velcro[™] in half lengthwise with the sticky facing in. This will stiffen the Velcro[™] and make it easier to run under the seat.


Step 8. Driver & Passenger Bottom/DB&PB: Pull the carpeted panel away from the back edge of the seat and connect the front hook Velcro[™] to the loop (fuzzy) Velcro[™] in back, making sure they connect on the far left and right side of the back edge.



Step 9. Driver & Passenger Bottom/DB&PB: Same as Step 8, fold the side hook Velcro[™] in half lengthwise with the sticky facing in. Slide it down exactly where shown.

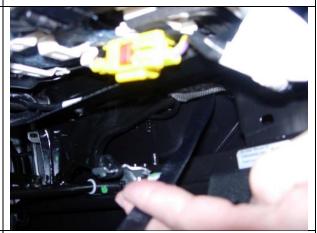

Step 10. Driver & Passenger Bottom/DB&PB: Look for the Velcro[™] from under the back edge of the seat. Route it thru the gap as shown and connect it to the loop Velcro[™] strip in back at an angle.

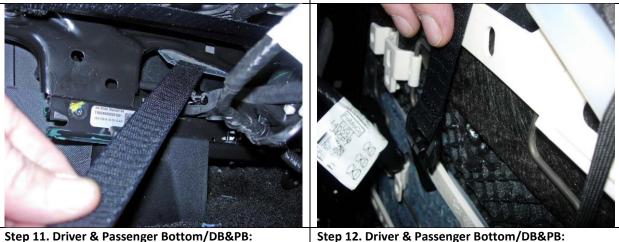

Step 11. Driver & Passenger Bottom/DB&PB: Same as Step 12, fold the inside edge Velcro[™] next to the console in half lengthwise and feed it thru the gap as shown. Connect it to the loop Velcro[™] in back at an angle.

Step 12. Driver & Passenger Bottom/DB&PB: Sideways view of under the back edge of the seat. Connect the two plastic buckles where shown to the plastic brace, then connect them to the loop Velcro on the back edge. This will hold the seat cover in place.



M-F 8am-5pm MST

Step 17. Lid/L: Connect the Velcro under the lid as shown, making sure to keep the Velcro[™] out of the way of the latch, see the latch on the top right of the picture.