

2019-2024 RAM Buckets



Step 1. Prepare the seats for installation:

View from under the back of the driver seat. The seat has a carpeted flap that wraps under the back edge. It's held in place by two elastic bands with plastic hooks attached. Follow the elastic with your hand under the seat, and push them forward to unclip. Note the areas they connected to the metal bar. Avoid routing Velcro™ across these areas when installing the seat cover bottoms.



Step 2. Identify Parts.

All the parts of your seat cover are labeled on the inside right of each part. Use the seat cover Part ID chart for identification.

The installation can be viewed on our YouTube Channel at: <https://youtube/be/a4VtFsHr-Tg>



Step 3. Console Lid/L:

Carefully open the Velcro™, and place the cover on with the cut-out in front, and the letter marked "L" on the inside right to the back. Next, tip the lid up, and use your body to hold it in place. Route the bottom or back Velcro™ through the hinge and connect it to the front Velcro™ as shown. Once connected, make sure to center the lid cover, then re-tighten the Velcro™ by holding them as in the picture at the very ends. You can get these very tight.



Step 4. Console Lid/L:

Lastly, fold the side Velcro™ under the lid to see where they'll sit. Prepare the areas with rubbing alcohol by scrubbing hard, then wiping them dry while it's still wet. Don't let the residue dry after scrubbing, it must be wiped clean while it's still wet. If the Velcro™ are not sticking, clean the areas with hot soapy water and a rag. Then re-clean with rubbing alcohol.



Step 5. Driver & Passenger Bottoms/DB&PB:

DB & PB are printed on the inside right back corner. View of the Driver Seat. Slide the seat forward, and for electric controlled seats, lift the seat all the way up. Carefully disconnect the Velcro™, placing the cover on the seat. Then tuck the back edge, and the outside edge in. From behind the seat, pull on the back edge to help form the seat cover to the front of the seat. Use one hand in a smoothing action from front to back on the seating area while pulling with the other hand from behind the seat.



Step 6. Driver & Passenger Bottoms/DB&PB:

Close up view of the driver's seat plastic molding. Fold the long hook (sticky) Velcro™ on the outside edge and fold it in half lengthwise with the sticky facing in. This stiffens it up making it easier to route. Push the seat in and away from the plastic, and push the Velcro™ straight down from where it's sewn on.



Step 7. Driver & Passenger Bottoms/DB&PB:

As in Step 6, fold the hook Velcro™ in half, and push it down next to the middle seat. From behind the seat, locate the Velcro™ from the left and right sides and route them to the back edge. Use the same smoothing action from front to back while tightening the Velcro™, connecting them at an angle to the loop Velcro™ sewn on the back edge.



Step 8. Driver & Passenger Bottoms/DB&PB:

Keep the Velcro™ up under the seat as much as possible.




Step 9. Driver & Passenger Bottoms/DB&PB:
Connect the long front edge hook Velcro™ to the loop Velcro™ sewn on the back edge. Using the same smoothing action, use one hand on top of the seat cover while pulling on the back of the seat cover, then connect the Velcro™.



Step 10. Driver & Passenger Bottoms/DB&PB:
Connect the plastic hooks under the back edge of the seat to the metal bar, and then press the hook Velcro™ to the loop Velcro™ sewn on the back edge. This will keep the seat cover from shifting around.



Step 11. Headrests/H:
Open the Velcro™, sliding the cover on with the headrest still on the seat with the extending Velcro™ to the front.

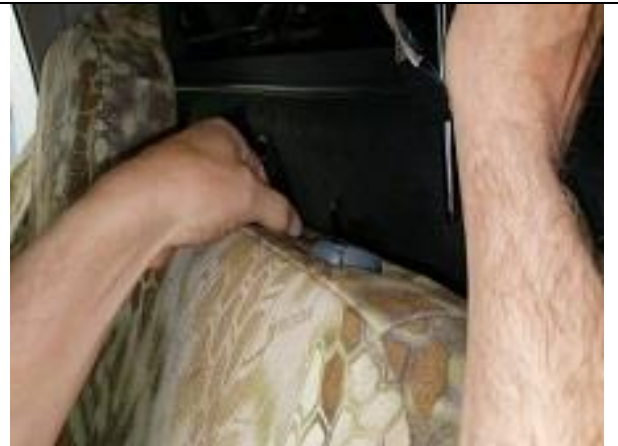

Step 12. Headrests/H:
Recline the backrests and depress the two push button releases shown while holding gentle upward pressure.



Step 13. Headrests/H:
Connect the side Velcro™ as shown.



Step 14. Headrests/H:
Tuck the front Velcro™ under the back edge and connect it to the loop Velcro™ sewn inside the back edge.



Step 17. Driver & Passenger Top/DT&PT:
Provisions are made for the side impact airbags. It is critical to get the covers on the correct side.
The covers are marked on the inside front right "DT & PT" for Driver & Passenger Top. Also note, the Driver Top has our Headwaters Seat Cover label on the backside.



Step 18. Driver & Passenger Top/DT&PT:
Disconnect the buckle Velcro™ from the cover. From behind the seat, lift the flap up that you detached earlier. Notice the two holes underneath the flap. Push the buckle Velcro™ the hole, clip facing the seat. Push on the hook while moving it up until it clicks, repeat for the other side.



Step 19. Driver & Passenger Top/DT&PT:
Slide the seat covers on with the extending hook Velcro™ to the front. Tuck the fabric under the plastic molding on the outside bottom edge of the seat.



Step 20. Driver & Passenger Top/DT&PT:
Tuck the fabric under the plastic for the headrests, starting on the push button side as shown.



Step 21. Driver & Passenger Top/DT&PT:
Slide the seat forward and tip the backrests forward. Using the same smoothing action, this time from top to bottom, pull the cover tight and connect the buckle Velcro™ to the seat cover.



Step 22. Driver & Passenger Top/DT&PT:
Using the same smoothing action, this time on the front outside edges while pulling on the angled Velcro™ shown. Connect the Velcro™ to the carpet fuzz on the back where shown.



Step 23. Driver & Passenger Top/DT&PT:
Re-connect the plastic clips under the seat.



Step 24. Driver & Passenger Top/DT&PT:
Lastly, pull the back edge down and press the hook Velcro™ sewn inside to the back edge and press it to the carpet flap